



Beta


C45PRO

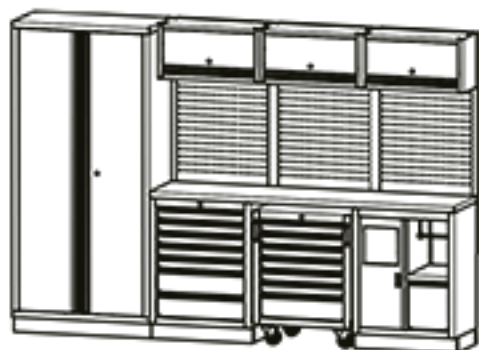


04500001
04500002




04500003
04500004

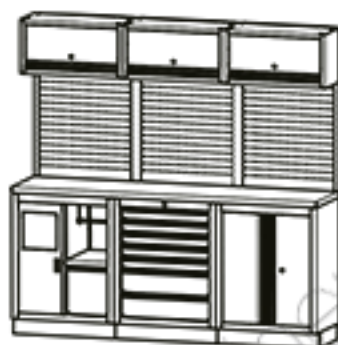

04500021
04500022

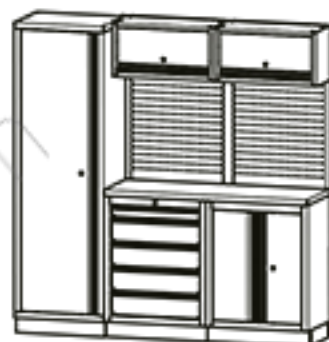

04500023
04500024

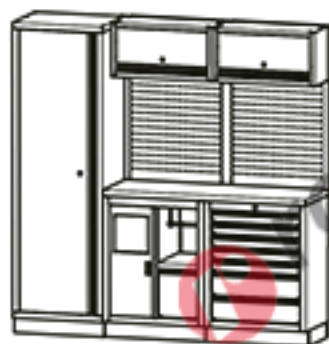


04500041
04500051




04500042
04500052




04500033
04500034

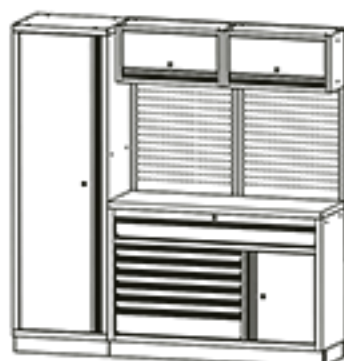

04500031
04500032

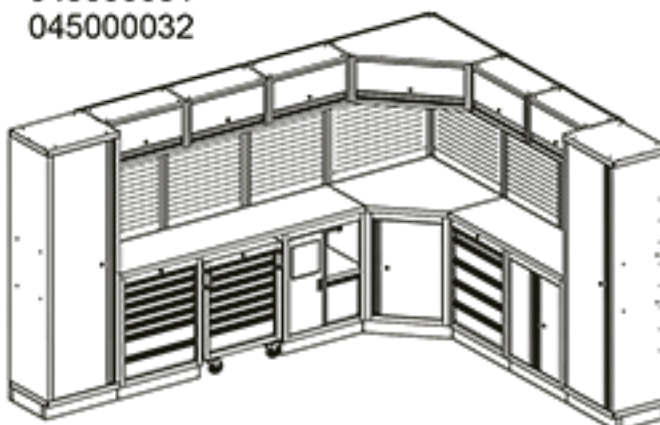


045000161
045000171

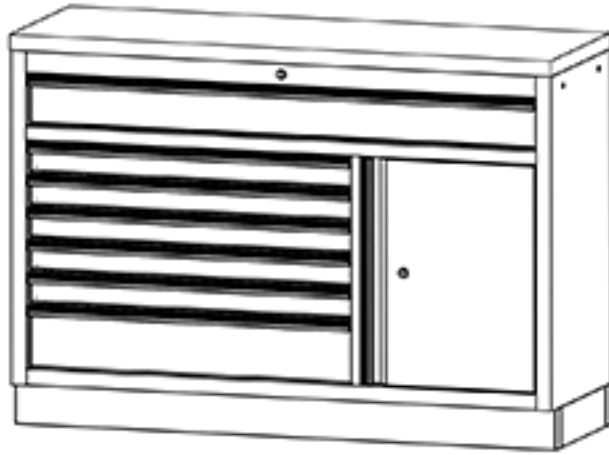

045000234



045000247

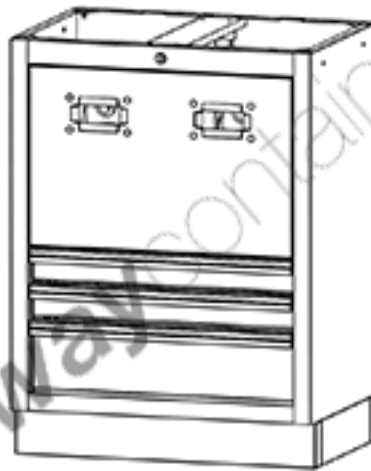

045000233



045000111
045000101




045000113
045000103



045000120
045000110




045000161
045000171

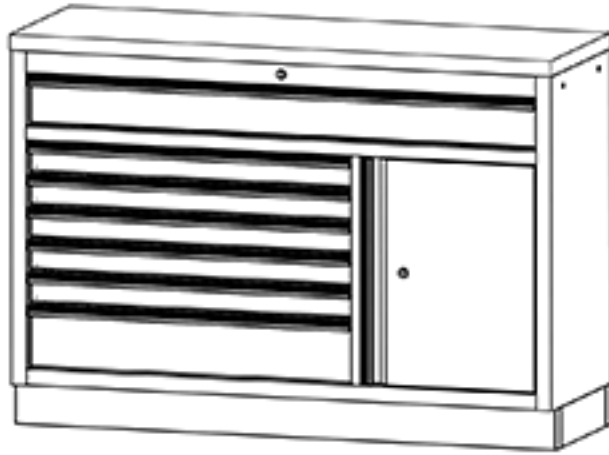

045000234



045000247

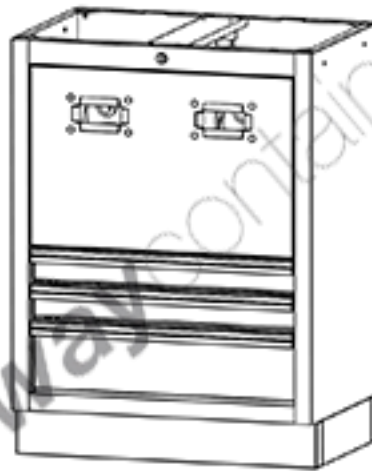

045000233



045000111
045000101



045000113
045000103





045000120
045000110





CASTERS ASSEMBLE

045000227

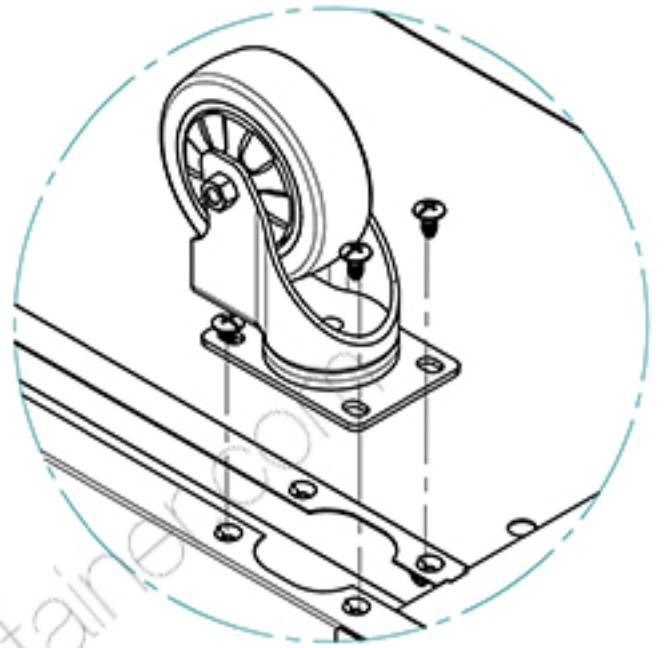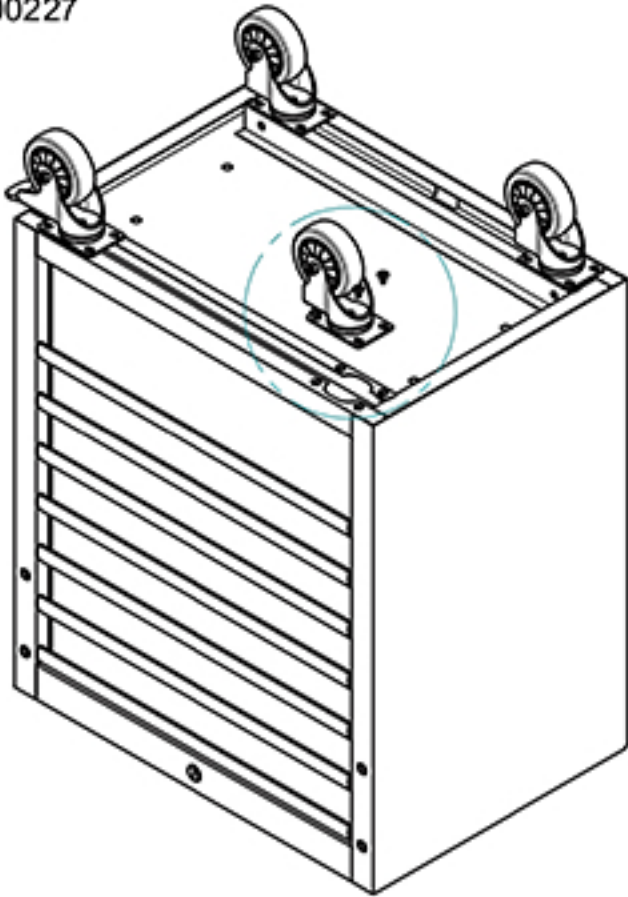


HANDLE FIX


045000227

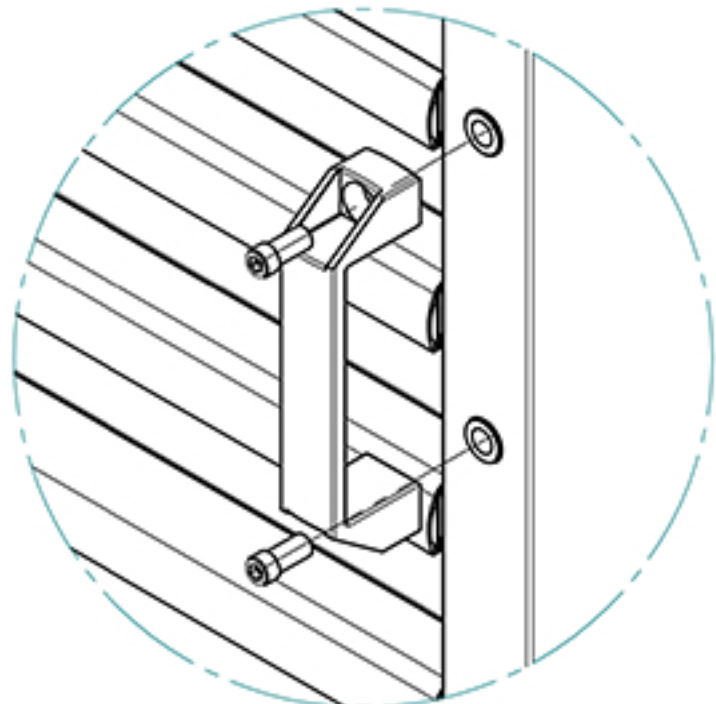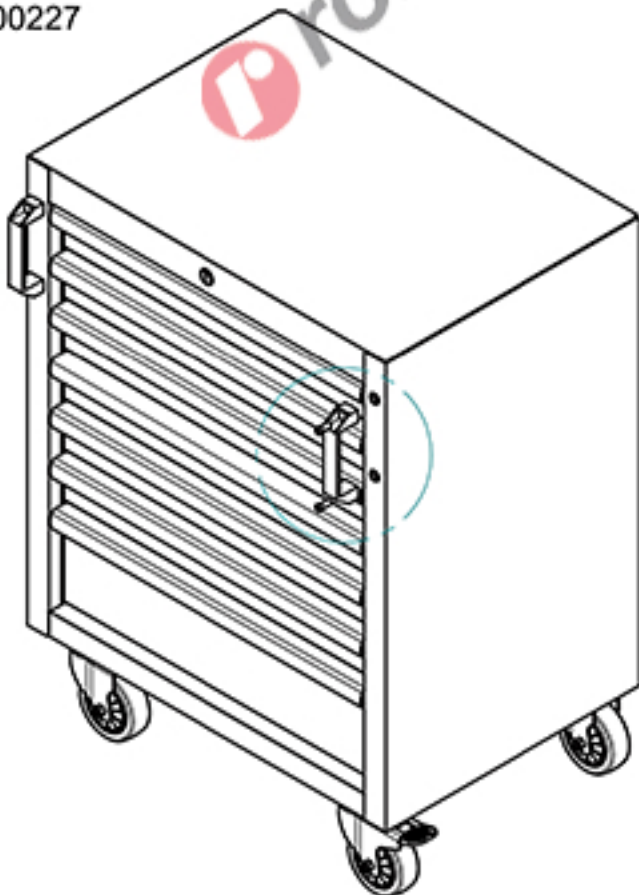


STEP 1

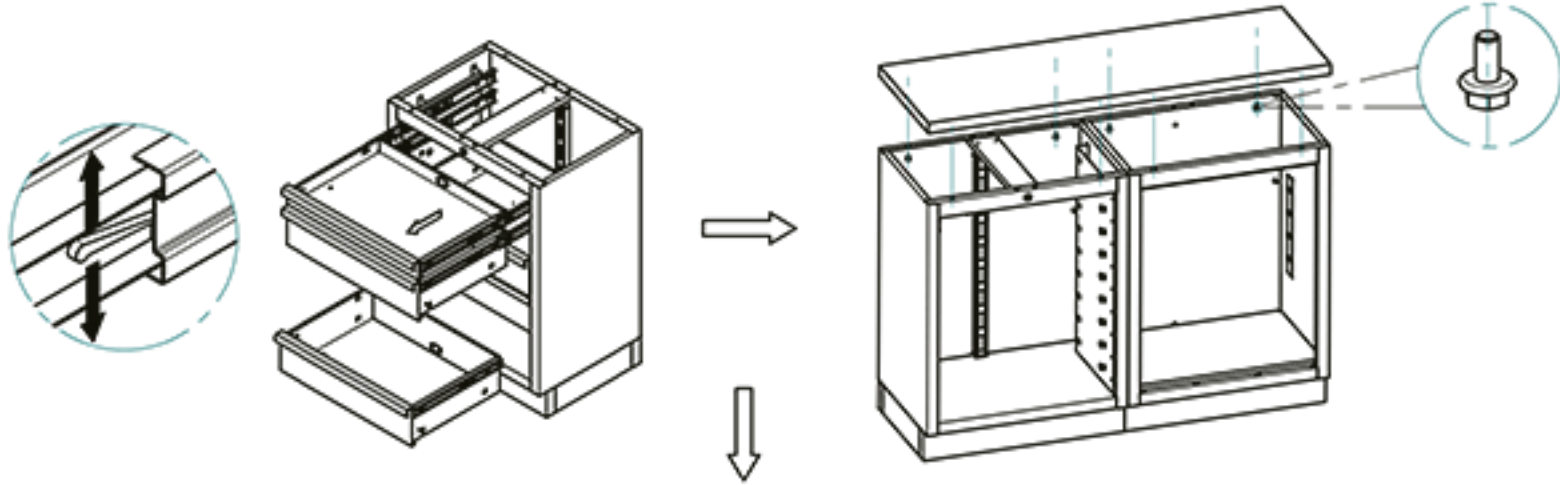


045000001
045000002

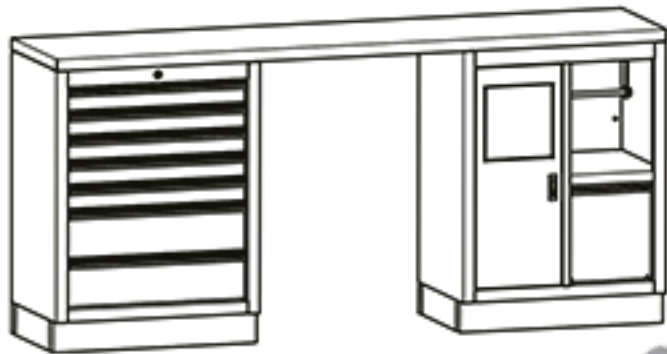


045000003
045000004

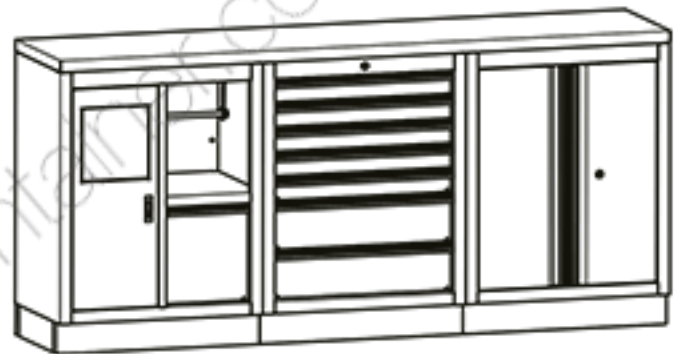


045000021
045000022

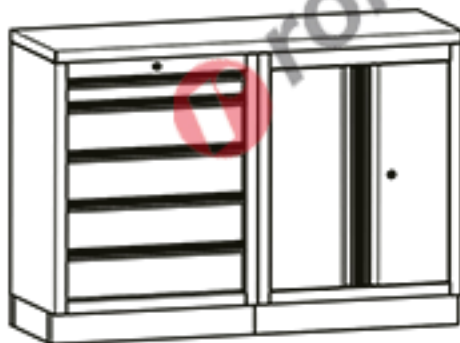


045000023
045000024

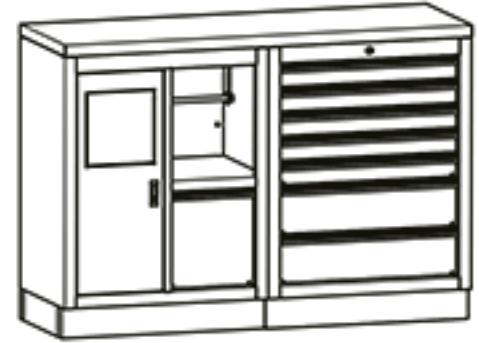


045000031
045000032

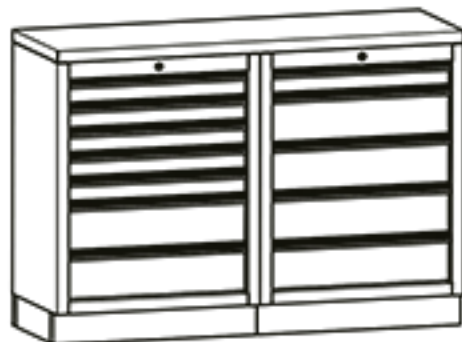

045000042
045000052


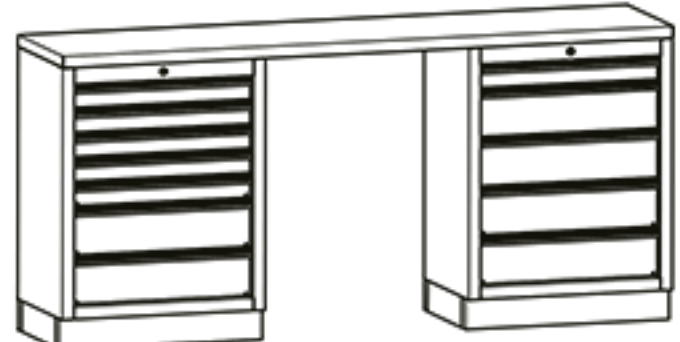


STEP 2

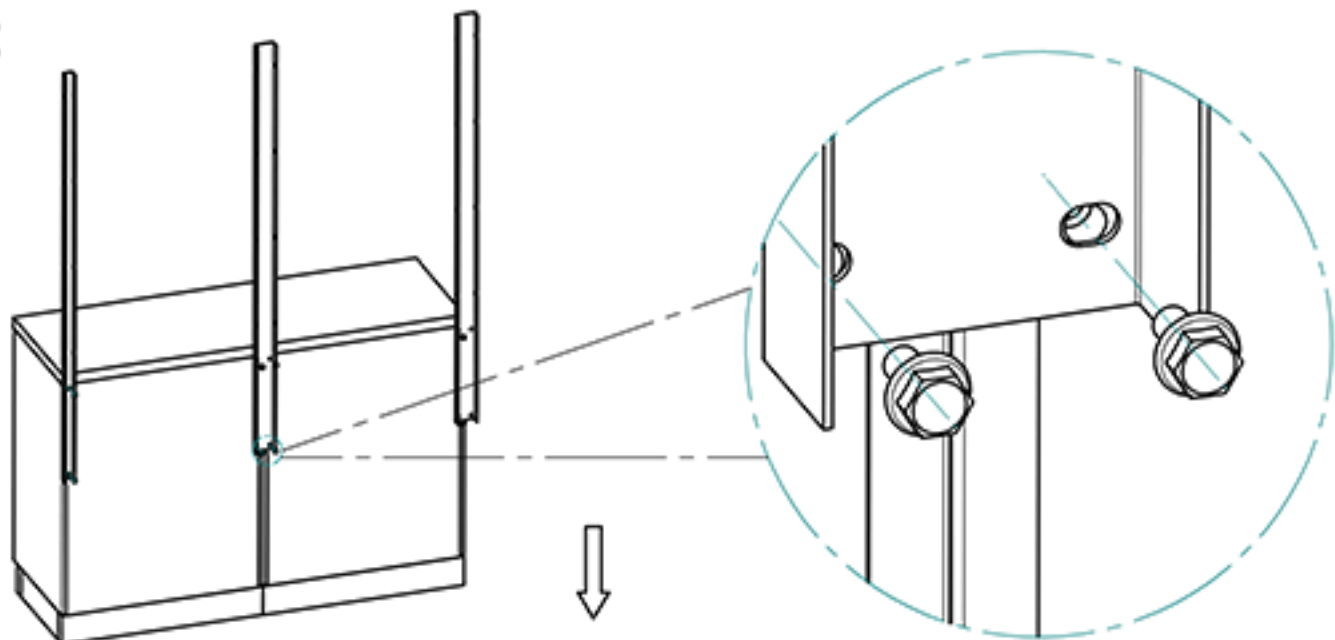



045000001
045000002

045000003
045000004

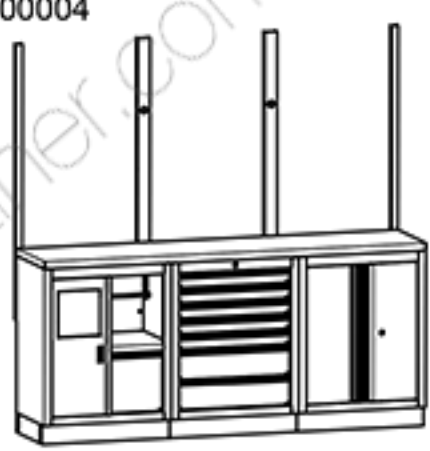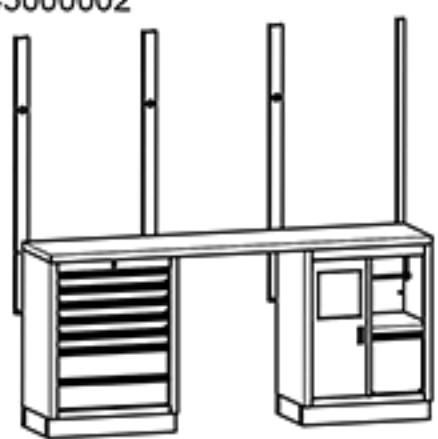



045000021
045000022

045000023
045000024

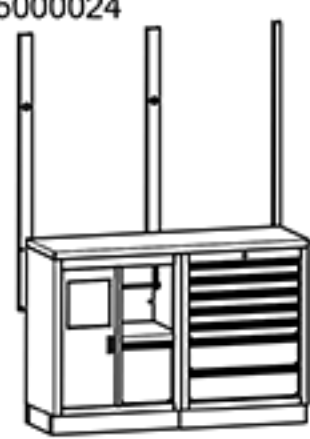
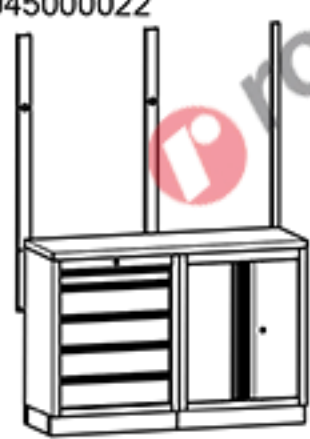


045000031
045000032


045000042
045000052

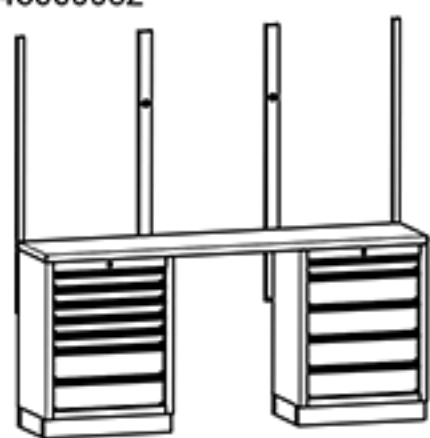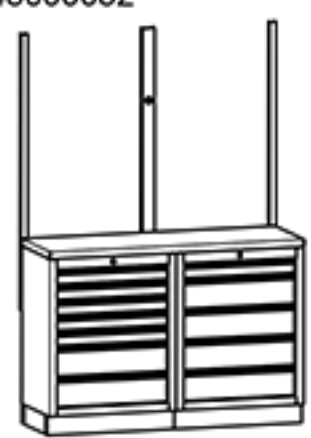


STEP 3

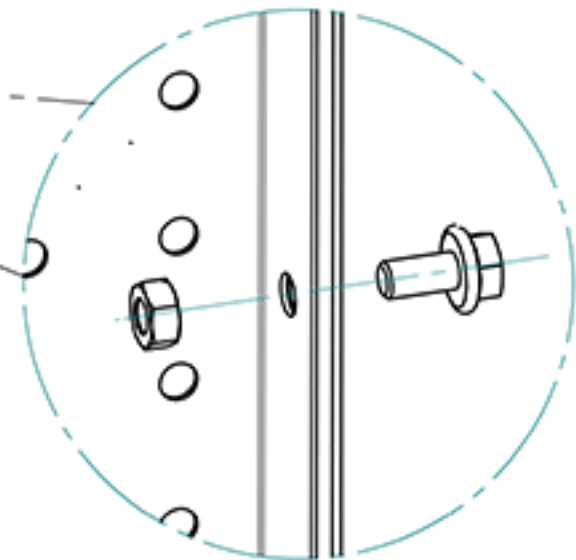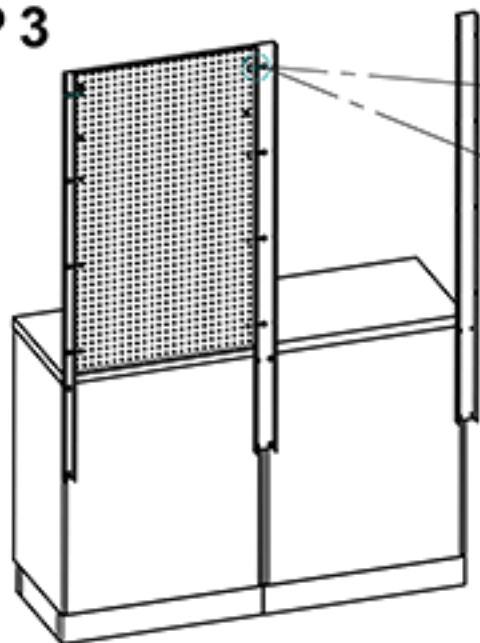


045000001
045000002

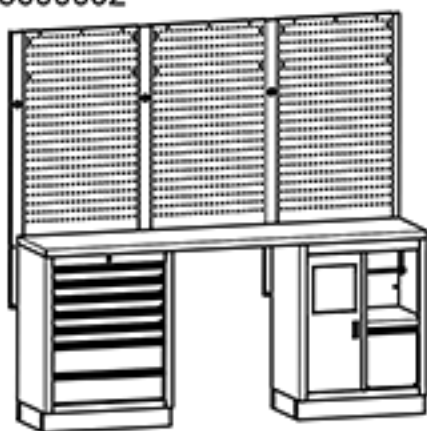


045000003
045000004

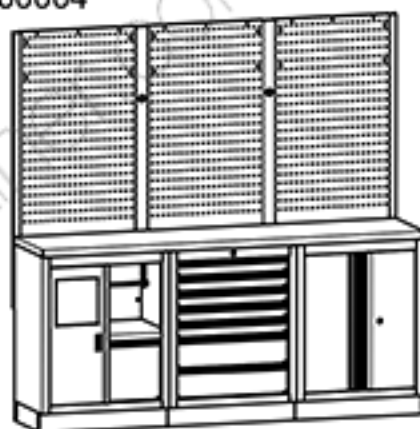


045000021
045000022

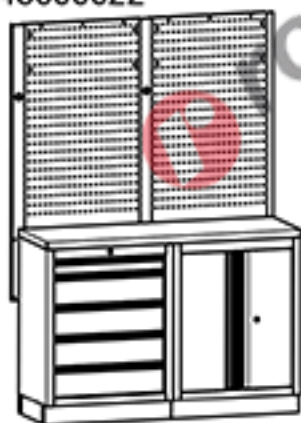


045000023
045000024

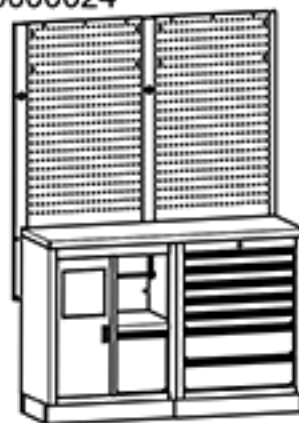



045000031
045000032

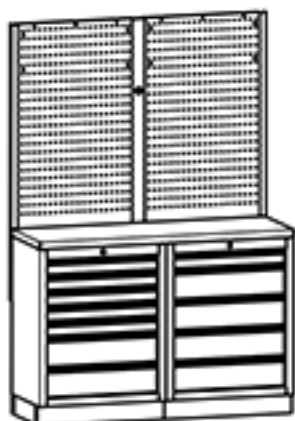

045000042
045000052


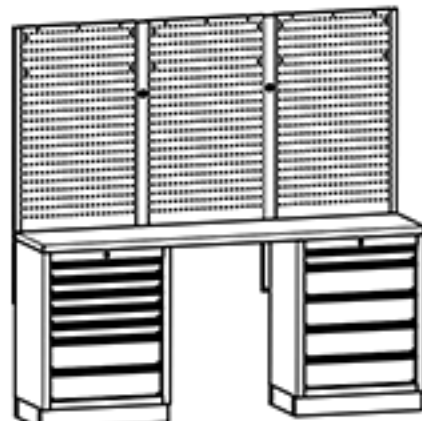


STEP 4

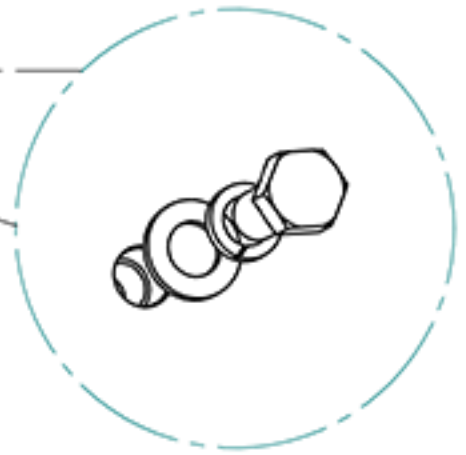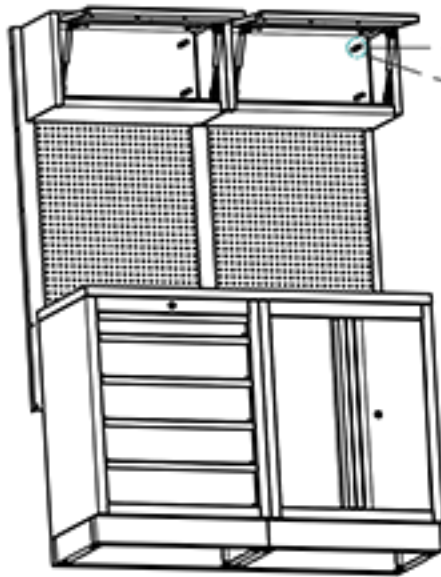



04500001
04500002

04500003
04500004

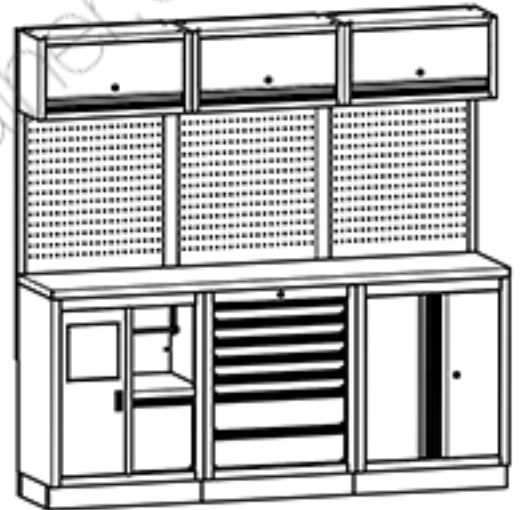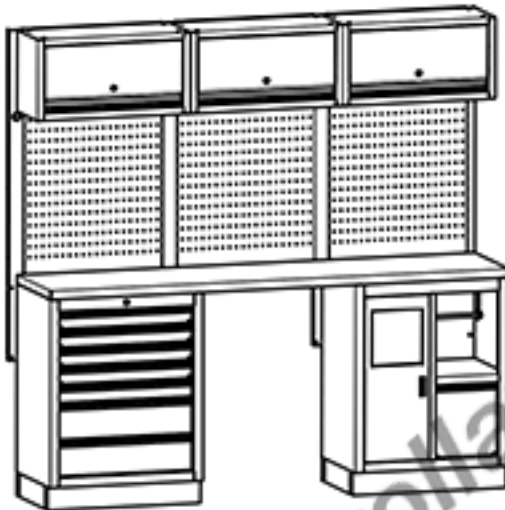


045000021
045000022


045000023
045000024

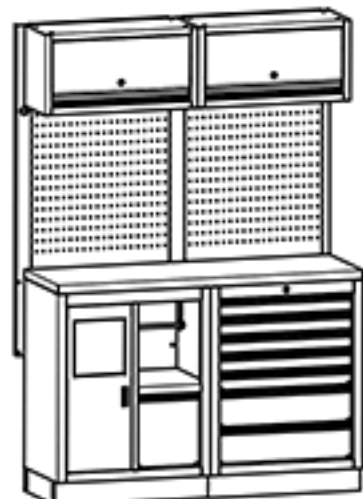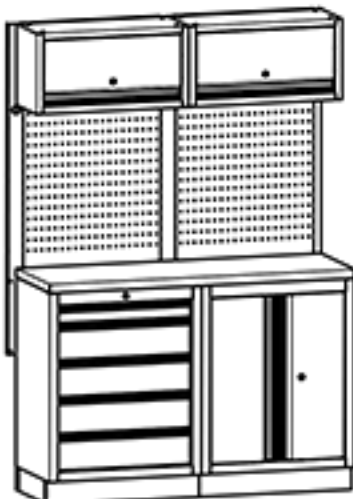

STEP 5


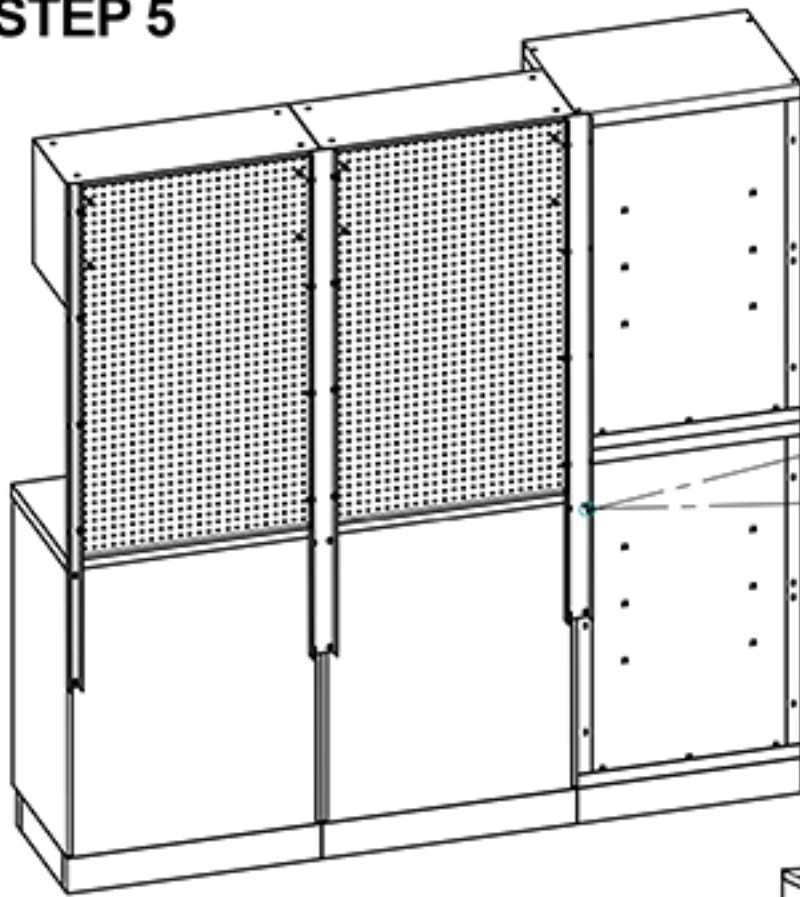


04500001
04500002

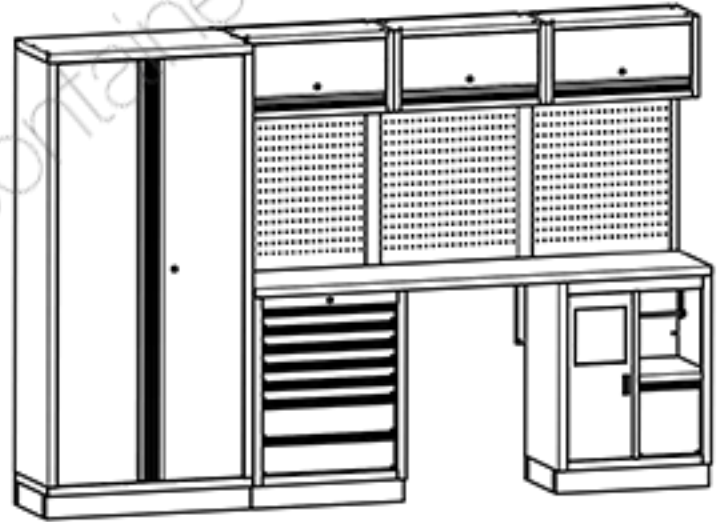


045000021
045000022

045000023
045000024

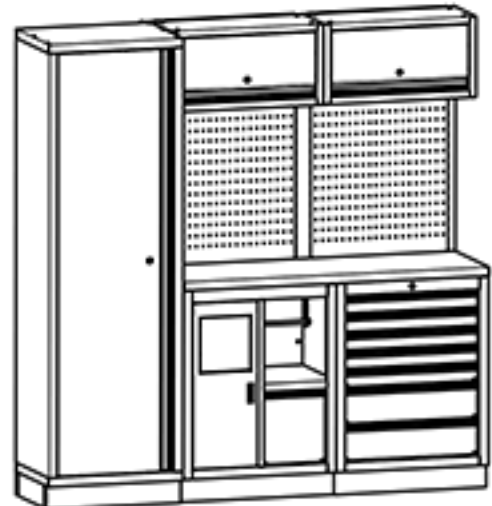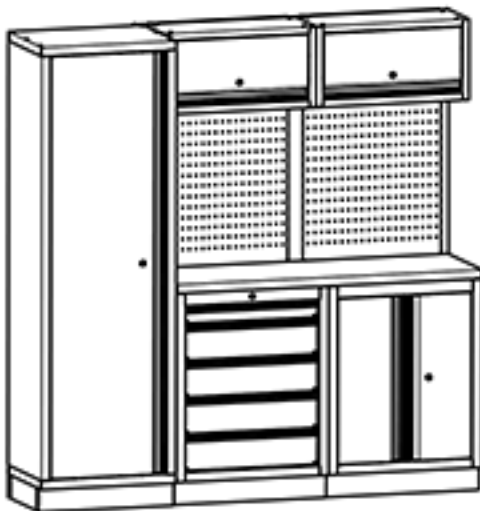

STEP 6

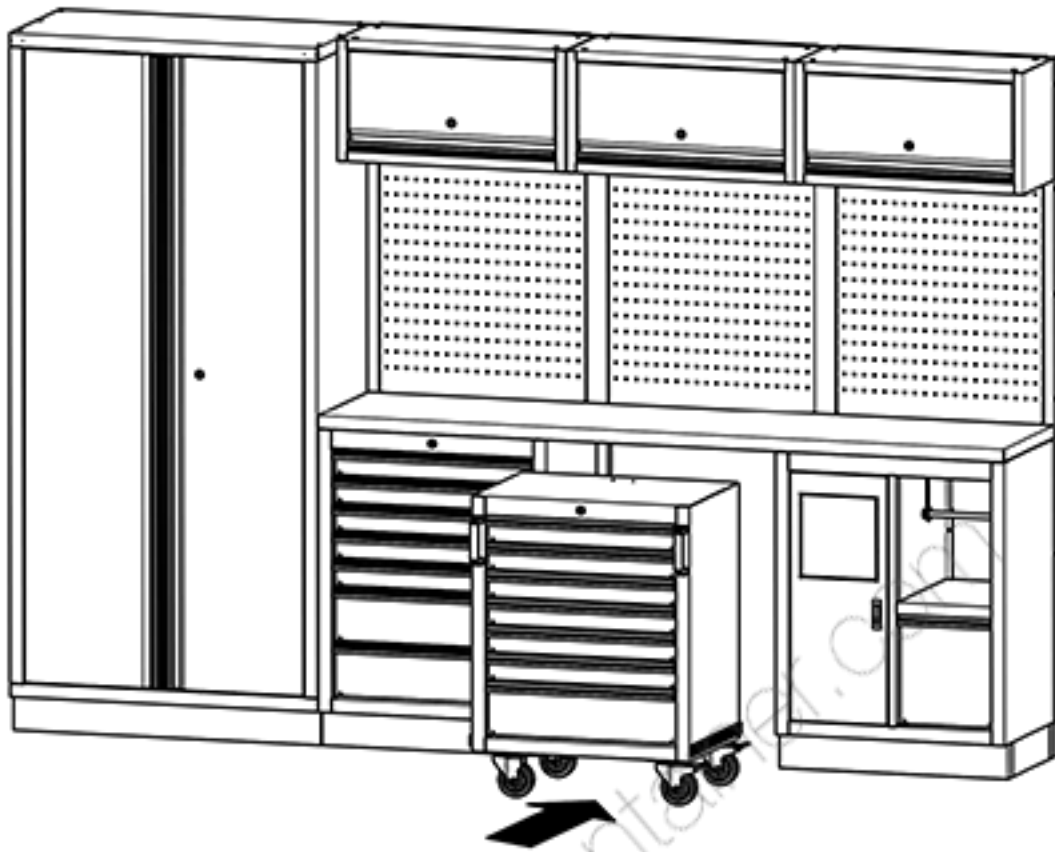

045000001
045000002

